

DART

DESIGN RF	DRAWN BY RF	DART AEROSPACE USA, INC. BELLEVUE, WA	
CHECKED #	APPROVED #	DRAWING NO. D2966	REV. A SHEET 1 OF 2
DATE 00.03.08		TITLE BO 105 SKIDTUBE ASSEMBLY	SCALE NTS
A	00.03.08	NEW ISSUE	

RELEASED
00.05.11 #

Qty	Part Number	Description
X	D2966-041	SKIDTUBE ASSEMBLY
1	D2962-125	EXTRUSION
1	D2964	CAP
1	D2965	CAP
1	D2970-1	WEARPLATE
1	D2970-3	WEARPLATE
1	D2971	CROSS BOLT SPACER
7	D2973	CROSS BOLT SPACER
1	D2976	WEB
36	ALS7-1032-130 or ALS4-1032-130 or AKS7-1032-130 or AKS4-1032-130	INSERT
28	AN960JD10L	WASHER
26	MS27039-1-08	SCREW
2	MS27039-1-09	SCREW
1	D3176-1	BUSHING
1	D3176-3	NUT

GENERAL NOTES:

- 1) TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED
- 2) WELDING TO BE DONE PER DART QSI 004.
- 3) INSERT D2976 WEB TO LOCATION SHOWN OFF AFT END OF SKIDTUBE AND BOND WEB INTO OUTER TUBE WITH NON-STRUCTURAL SIKAFLEX-241/-291 ADHESIVE PER DART QSI 015 AFTER BENDING.
- 4) USE DART DRILL TEMPLATE DT8451 TO LOCATE AND DRILL Ø0.297 HOLES FOR WEARSHOE INSERTS. INSTALL ALS7-1032-130 PER SECTION B-B (34 PLACES) AFTER FINISH. SEAL WEARPLATE SCREWS WITH SIKAFLEX-241/-291.
- 5) DO NOT INSTALL MS27039-1-08 SCREWS AND AN960JD10L WASHERS IN THESE LOCATIONS.
- 6) INSTALL ALS7-1032-130 INSERT, MS27039-1-08 SCREW, AND AN960JD10L WASHER IN 2 PLACES THIS LOCATION BEFORE POWDER COATING.
- 7) FINISH:
ACID ETCH, ALODINE PER DART QSI 005 4.1 PRIOR TO INSERTING D2976 WEB
POWDER COAT ASSEMBLY GLOSS WHITE (REF 4.3.5.4) PER DART QSI 005 4.3
BLACK ANTI-SKID PAINT AS INDICATED TO 1.00 ABOVE CENTER LINE PER DART QSI 005 4.4 (OPTIONAL) BLACK SANDTEX (REF 4.3.5.7)


# 01.01.29
CP 01.01.30

A2	02.10.30	ADD D3176-1/-3	# CP
A1	01.01.29	CHANGE COLOR TO BLACK SANDTEX	# CP


Copyright © 2000 by DART AEROSPACE USA, INC.

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.

DETAIL A
SCALE 1:3

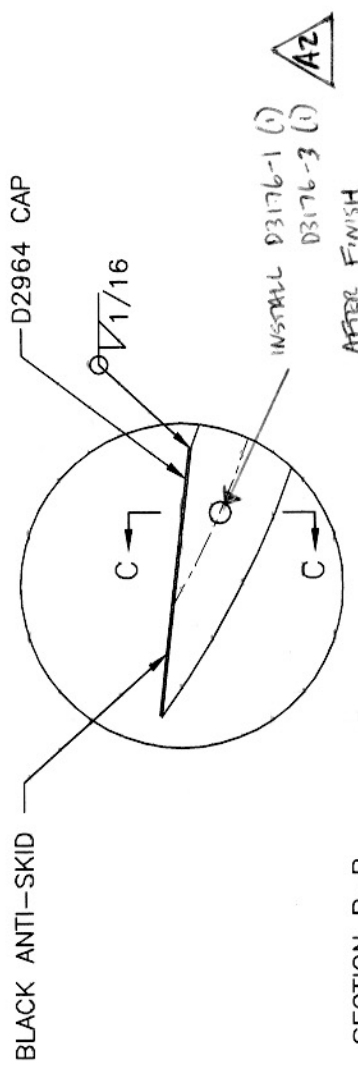


SECTION B-B
SCALE 1:6

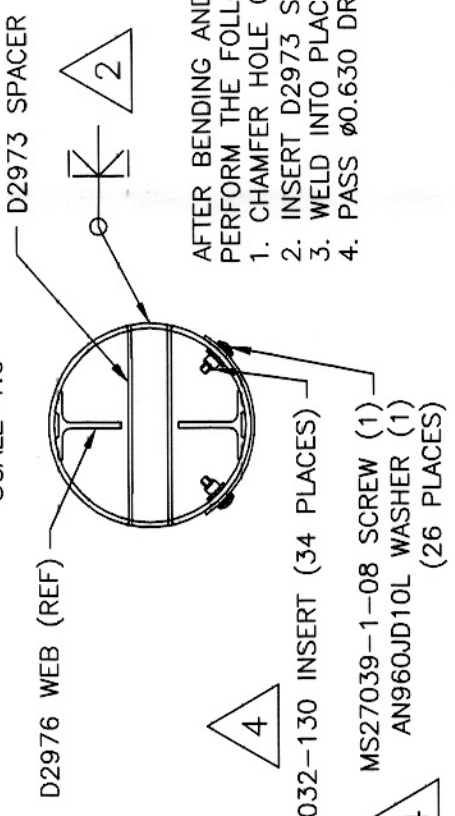


AFTER BENDING AND DRILLING ASSEMBLY PERFORM THE FOLLOWING FOR $\phi 0.750$ HOLES ONLY:

1. CHAMFER HOLE $0.030 \times 45^\circ$
2. INSERT D2973 SPACER (7 PLACES)
3. WELD INTO PLACE AND GRIND FLUSH
4. PASS $\phi 0.630$ DRILL TO REMOVE SPILL OVER

SECTION C-C
SCALE 1:6

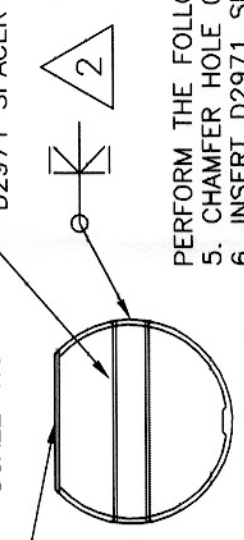

DETAIL D
SCALE 1:4

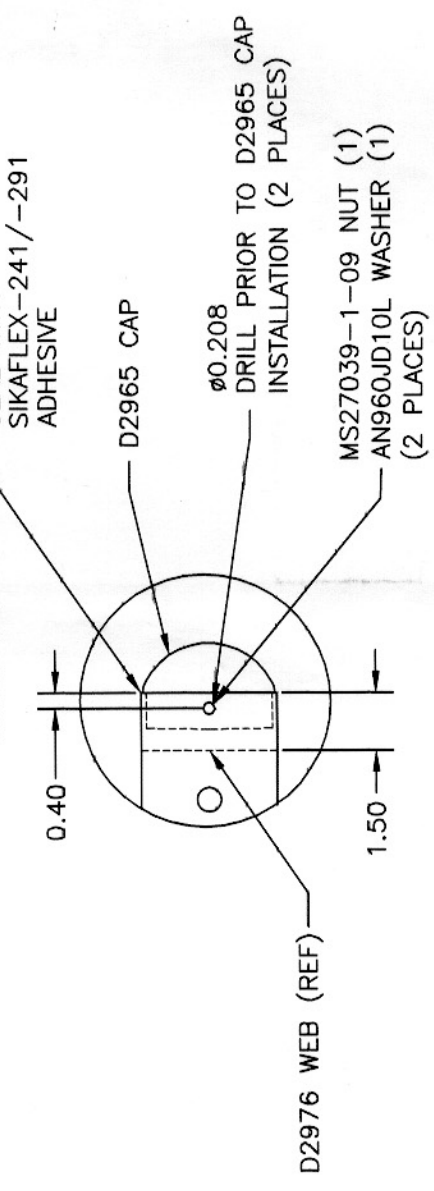

RELEASED
00-05-11

COPYRIGHT © 2000 BY DART AEROSPACE USA, INC.		DESIGN	DRAWN BY	DART AEROSPACE USA, INC.	
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.		RF	RF	BELLEVUE, WA	
		CHECKED	APPROVED	DRAWING NO.	REV. A
		DATE		D2966	SHEET 2 OF 2
				TITLE	SCALE
				BO 105 SKIDTUBE ASSEMBLY	1:20